
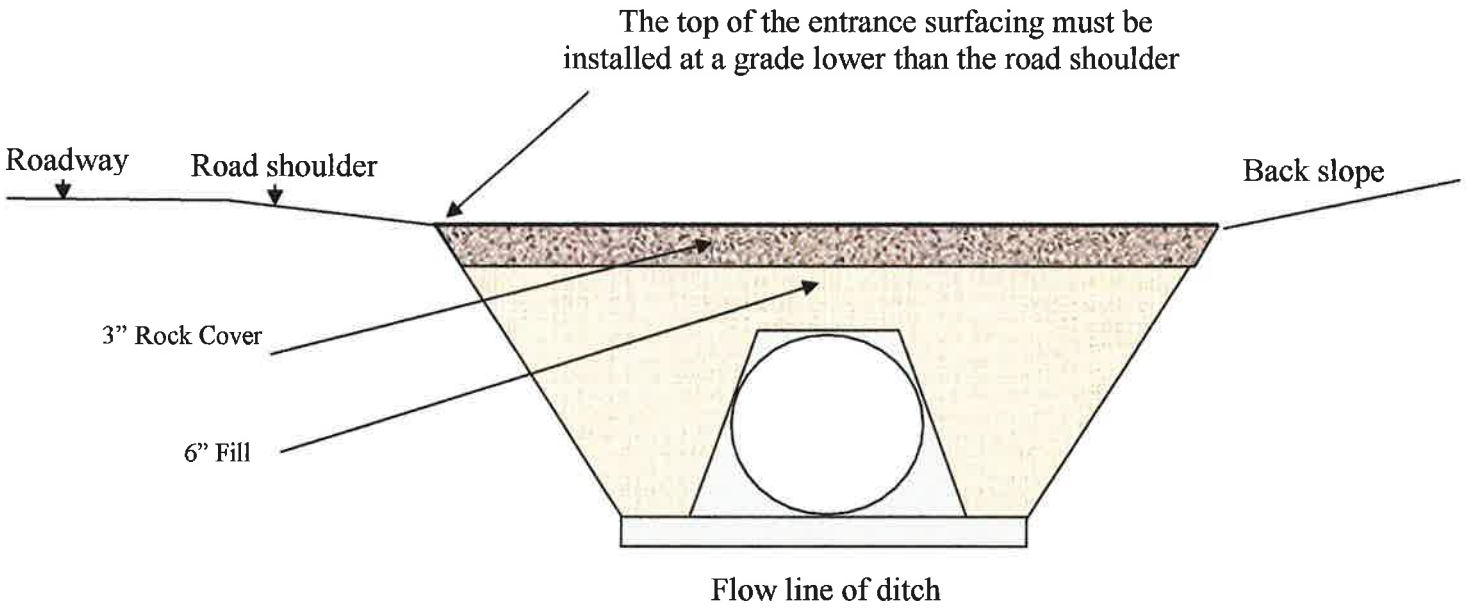


**Exhibit A: Cross Section through Typical Culvert Pipe**



**Exhibit B: Plan View of a Typical Corrugated pipe installation.**

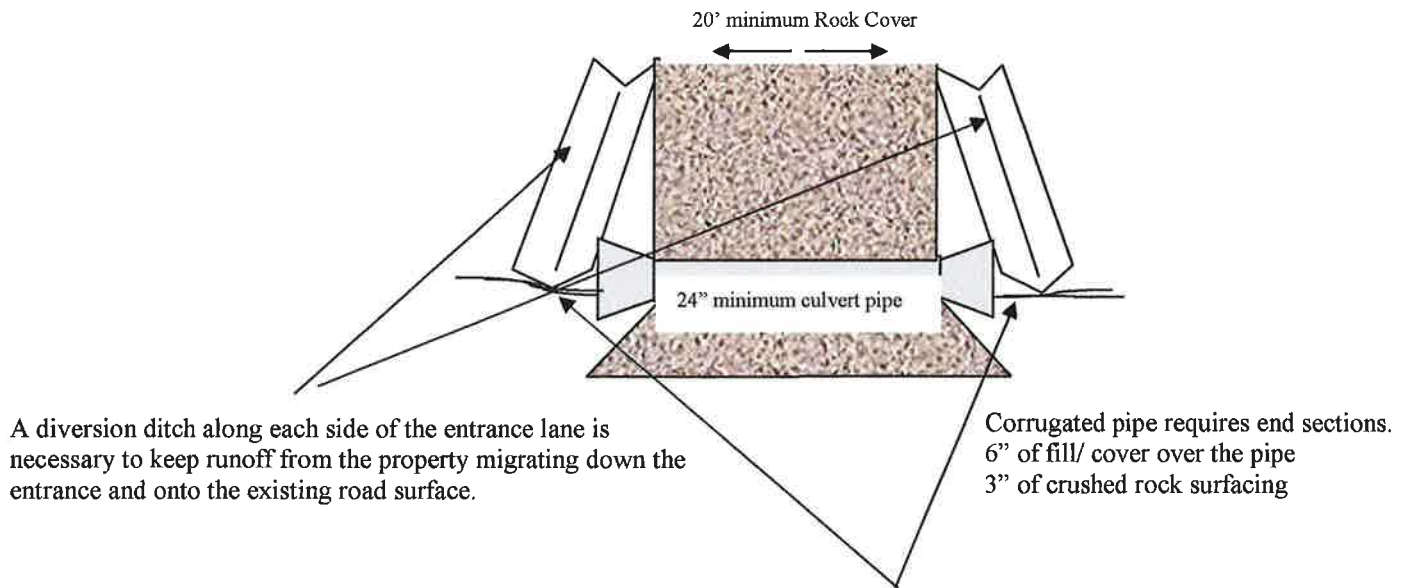

If the existing ditch depth is insufficient, it may be necessary to create a ditch at least 20' or 30' at each end of the culvert pipe.